


55 The front edge of the Tow Knee should be even with the front edge of the deck as shown. It does not need to be exact.




56 Temporarily clamp the Deck to the Hull to check the alignment of the Tow Knees.



57 Trim the Hatch Cover. Cut 4 pieces of Velcro approximately 1/4 inch long.

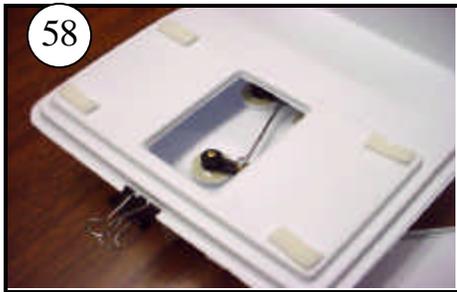


58 Place the Velcro hook-side down. (loop side is fuzzy) Remove backing. Press the Hatch Cover in place. Remove Hatch and firmly press the velcro to set the adhesive.

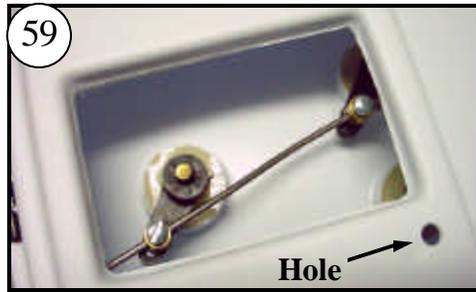

59 You can access the EZ-Connector Screws for the Rudder and Left Flanker through the hatch. Drill a small hole to access the Right Flanker. 2" tape will cover the opening.




60 Trim the 2nd Deck. Easier to cut with the waste to the left of the cut. Use a Hobby knife to trim the inside corners. Cut opening in the top the same as in

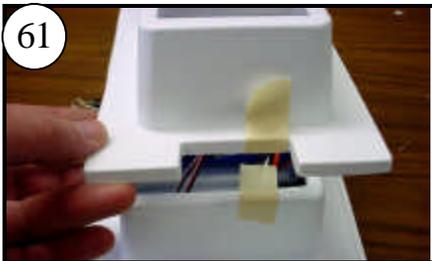

61 Put tape on the Bow of the Deck and 2nd Deck as shown. This will mark their locations once you center the 2nd Deck onto the Deck.



62 Use a ruler to measure the left and right overhang of the 2nd deck to center it on the Deck. When

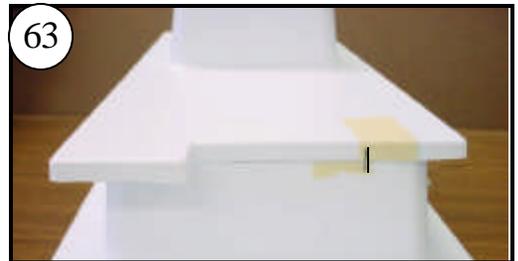


63 Repeat this at the stern of the 2nd Deck. This will allow you to remove the 2nd deck to install the Stairs on the Bow & Stern of the Deck.



64 One set of stairs is marked for rough-cutting. Transfer the marks to the other 3 sets. One is a spare, in case you mess up one! Cut with a hobby knife. Flex to break apart.



65 After rough-cutting, trim the sides of the stairs with scissors so they are flat. Trim the bottom step so its height

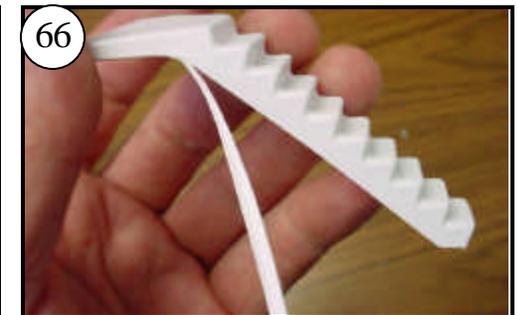

66 Trim the side as much as you need to get the look you want.