

Vac-U-Tow™ Rear Hatch Revision



Trim the rear hatch opening along the marked pencil line. Score repeatedly with a hobby knife until the plastic center is free.




Single-Screw



Twin-Screw

Install the set screws for the rudder arms so they can be reached from the hatch. Flankers on the rear side and rudders on the front side.

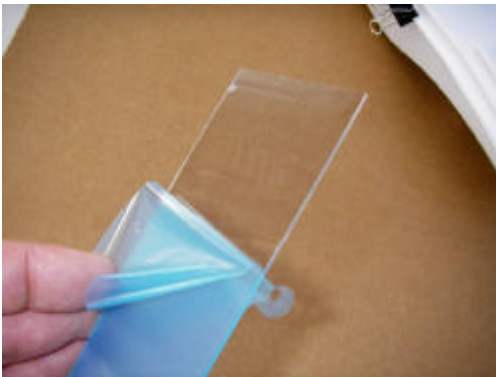

Check the pre-cut rear hatch window for a good fit. Some minor trimming may be necessary. Trim the tips of each corner to match the recessed opening of the hatch. Peel off the blue protective cover. Use tape to seal the window to the deck for a waterproof installation.